
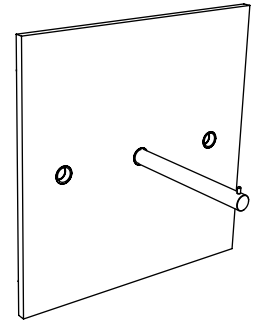


Assembly & Installation Instructions

POG: BASIC


① Insert

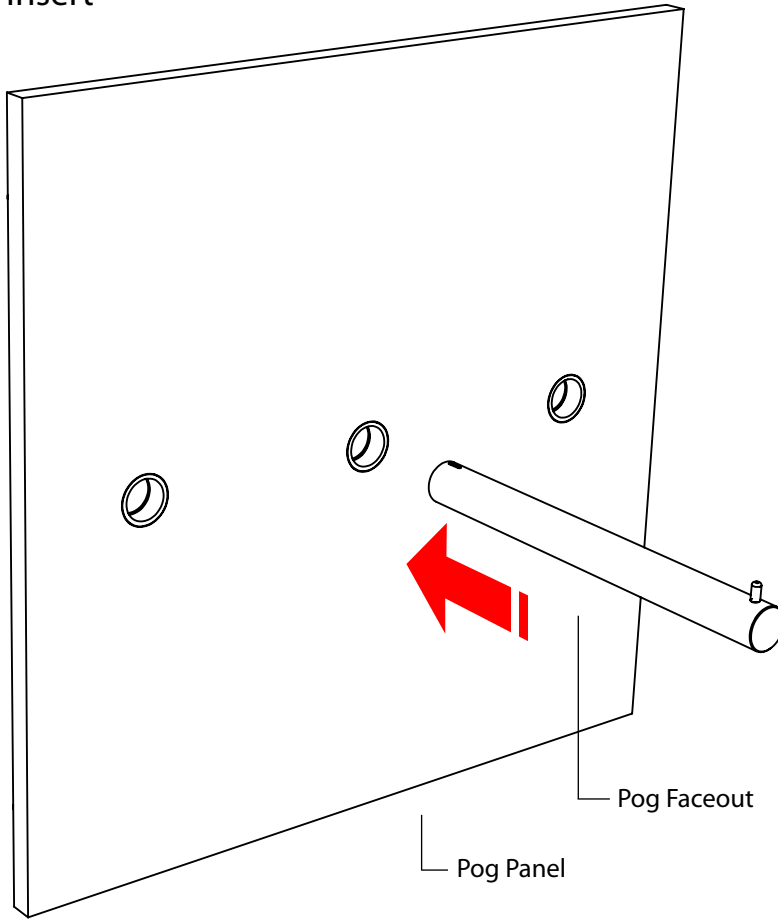

Basic Pog Accessory Installation

1. Insert- Pog component into Pog Insert on panel. Make sure the accessory spring is facing upward.
2. Click- You will here a snap when component is seated. If you don't hear a snap twist the Pog Faceout, or accessory, back and forth until you hear the snap of the spring.

② Click

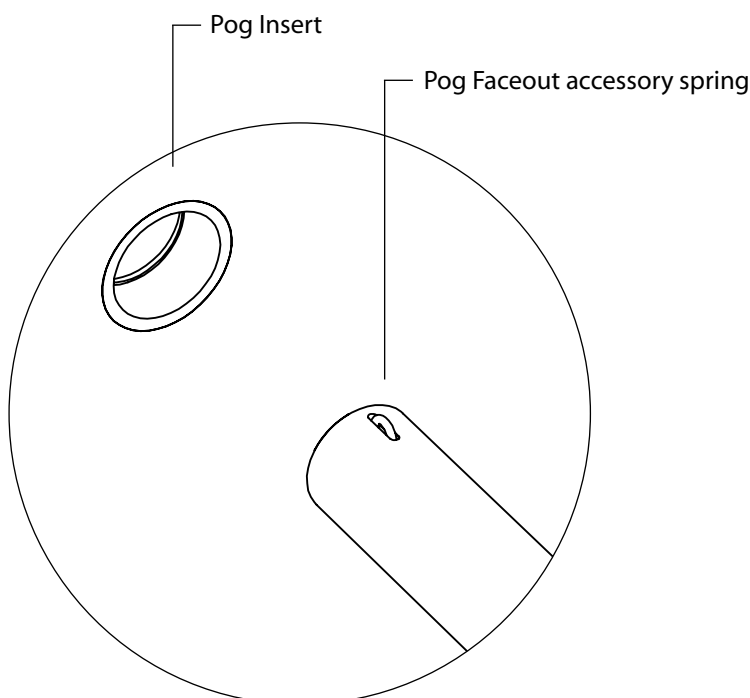

Note:



B&N INDUSTRIES
650.593.4127
WWW.BNIND.COM