
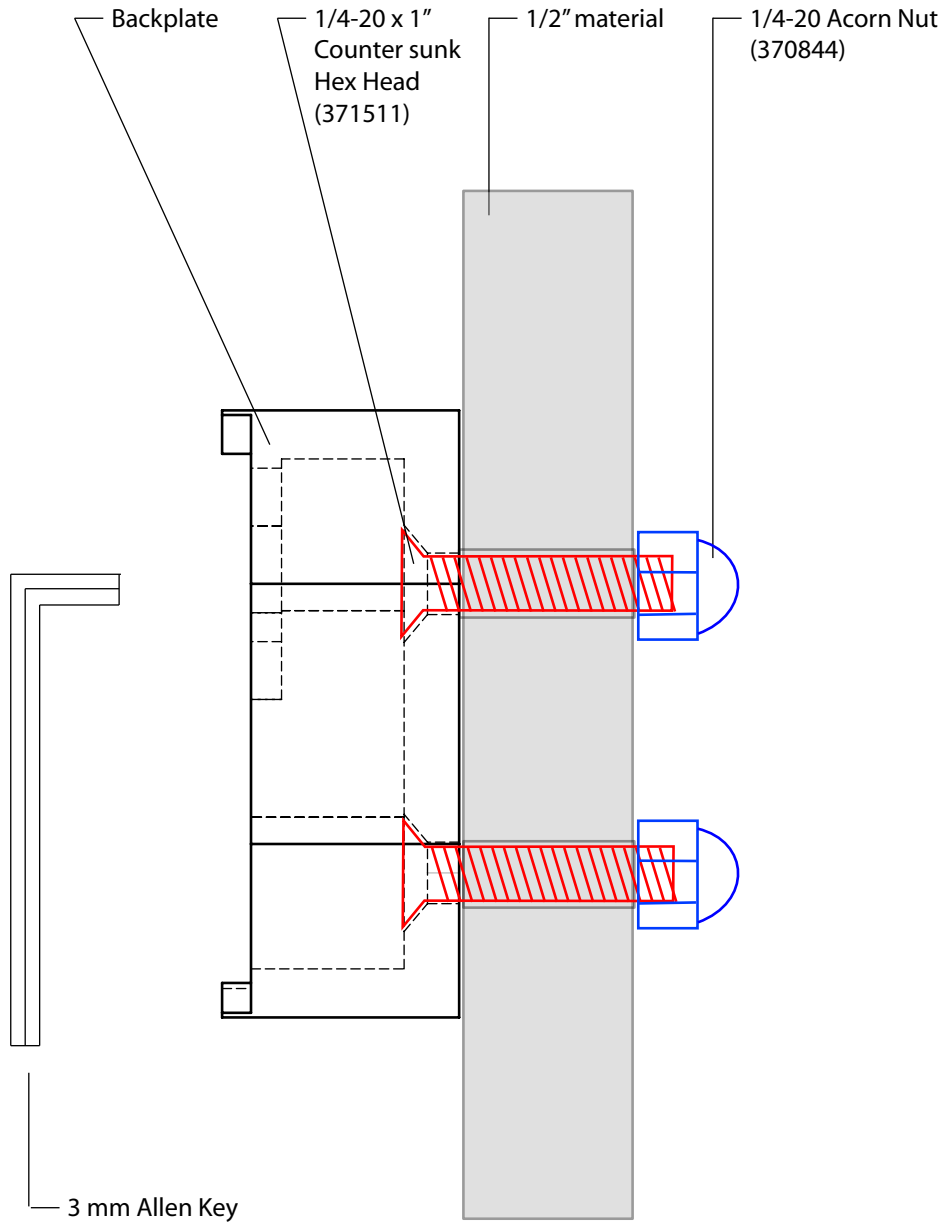


# Assembly & Installation Instructions

## SORBETTI: Backplate

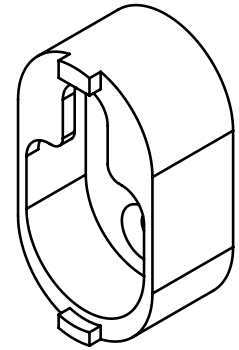

### Sorbetti Accessory Installation

1. Align- the two hole of the BACKPLATE with the panel mounting holes.
2. Insert- 1/4-20 x 1" Counter Sunk Hex head (371511) thru the BACKPLATE and into the panel- make sure the counter sunk surface is flush together.
2. Tighten- Acorn nut against panel while holding the 1/4-20 x 1" Hex Screw with the provided 3mm Allen Key.



B&N INDUSTRIES  
650.593.4127  
WWW.BNIND.COM