


# Assembly & Installation Instructions

## 6.1 : CABLE MAXI/MINI

APPROVED  
By dwilliams at 8:35 am, Jun 22, 2010

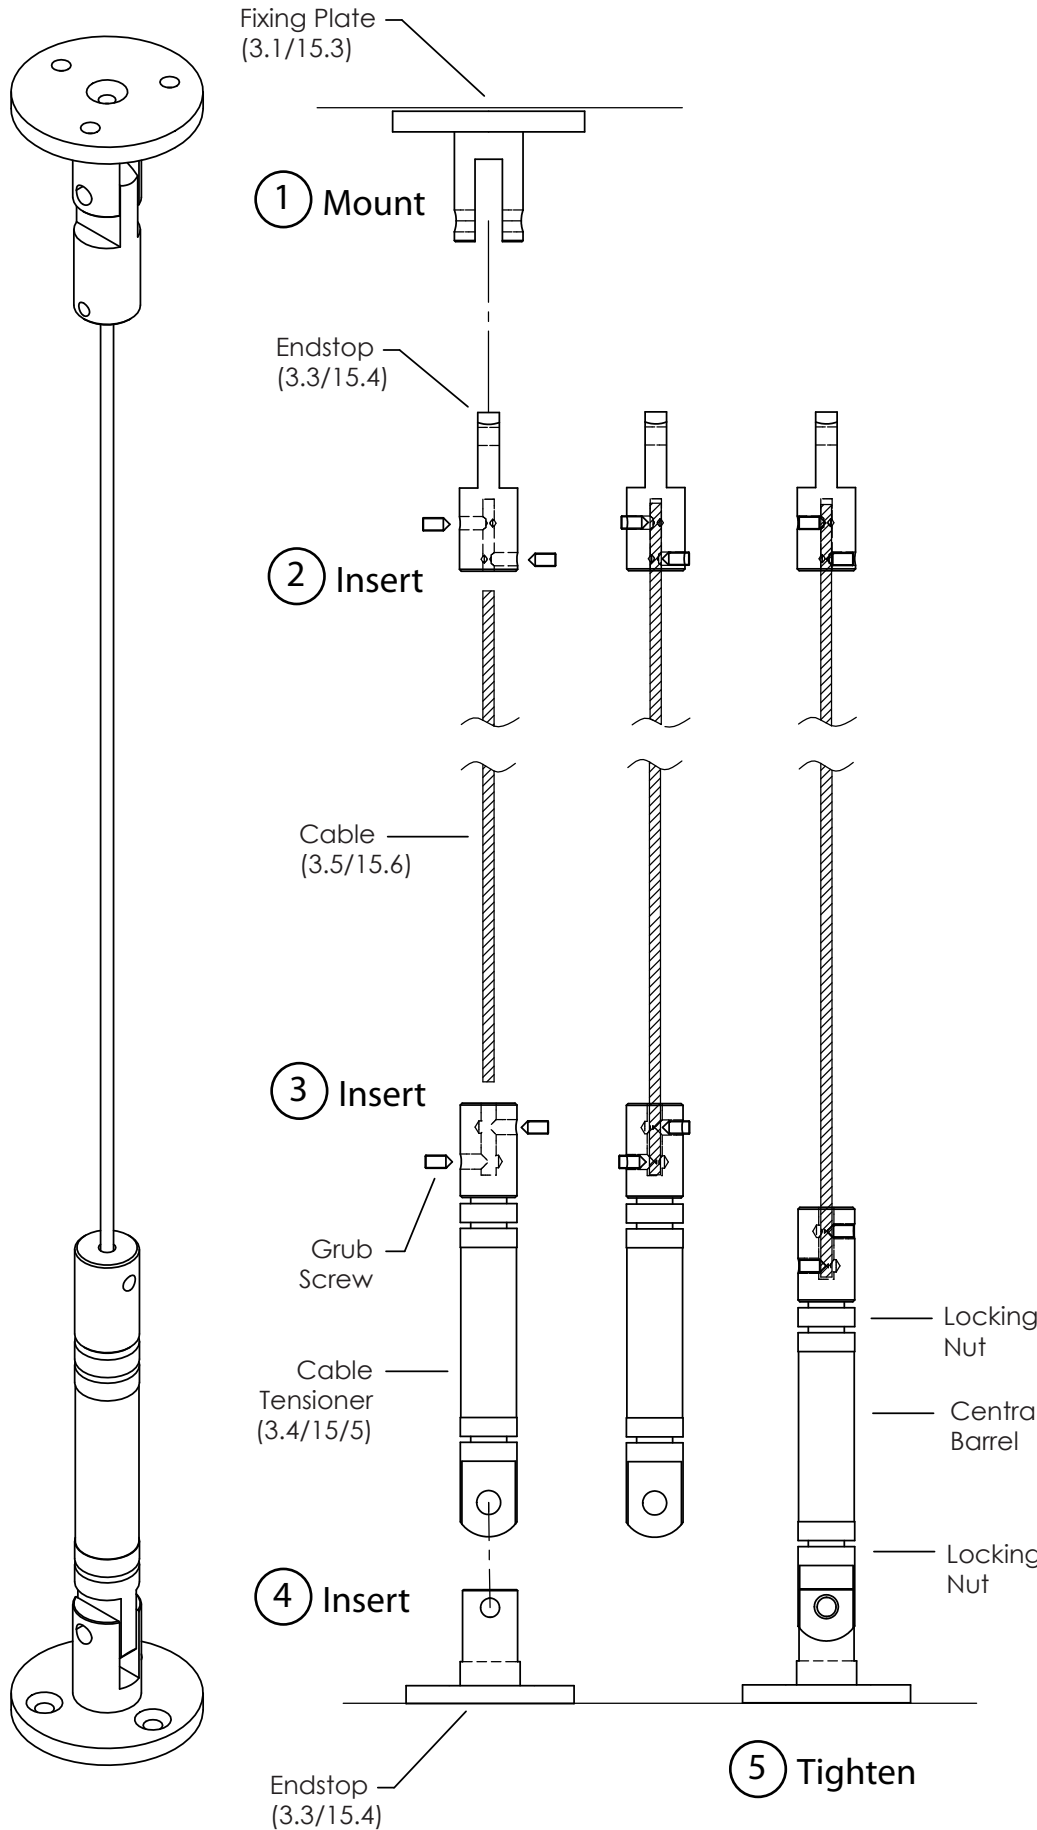

### Floor to Ceiling

Measure from the floor to the ceiling and then subtract 6 1/2". Cut Cable (3.5/15.6) to corrected measurement.

1. Mount- Attach Fixing Plates to the ceiling and floor blocking using #8 screws (supplied by others).

2. Insert- Cable into the Endstop making sure the cable passes behind both Grub Screws, tighten securely. Insert End Stop into ceiling Fixing Plate, tighten Grub Screws until secure.

3. Insert- Cable into End Fixing of Cable Tensioner making sure the cable passes behind both Grub Screws, tighten securely. Insert End Stop into ceiling Fixing Plate, tighten Grub Screws until secure.

4. Insert- Making sure the Cable Tensioner is fully extended, insert into the Floor Fixing Plate, tighten Grub Screws.

5. Tighten- Rotate central barrel of Cable Tensioner clock-wise until the Cable is at the desired tension. Using the two Locking Nuts (above and below the Cable Tensioner) tighten against the Cable Tensioner.

Max load (if installed correctly):  
Mini Cable & Tensioner - 140 Kg  
Maxi Cable & Tensioner - 200 Kg

Torque Spec:  
5mm Hex Grub Screw - 3.5 Nm  
(hand tight with 3mm Allen key)

PLEASE NOTE: DO NOT overtighten picture panel/shelf grips, as this may cause damage to the cable.

It is important to add adequate blocking to hold desired display weight loads. Questions? Please contact your B&N representative.



B&N INDUSTRIES  
650.593.4127  
WWW.BNIND.COM